

# AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)  
AL-50 (FAA)  
BIRMINGHAM, ALABAMA

ATIS  
119.4 270.1  
BIRMINGHAM TOWER  
119.9 317.725  
GND CON  
121.7 348.6  
CLNC DEL  
125.675 305.2



33°35'N  
VAR 3.9° W  
JANUARY 2025  
ANNUAL RATE OF CHANGE  
0.1° W

RWY 06-24  
PCR 1102 F/D/X/T  
S-120, D-250, 2D-485, 2D/2D2-992  
RWY 18-36  
PCR 440 F/D/X/T  
S-105, D-143, 2D-197

FIELD  
ELEV  
650

RESTRICTED ACCESS  
(prior approval only)

ELEV  
644

ALABAMA  
ANG

FIRE STATION

RESTRICTED ACCESS  
(prior approval only)

HS 1

TERMINAL

FIRE STATION

TWR

WEST  
FBO

ILS HOLD

ELEV  
603

HOLD AREA

CARGO RAMP

AIR CARGO FACILITY

81

183.9°

ILS HOLD

239 A°

0.7% DOWN

LAHSO

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

86°46'W

86°45'W

# AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA  
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)

SE-4, 19 MAR 2026 to 16 APR 2026