

ATIS ★285.45		RADAR required	Rwy	Knots	60	120	180	240	300	360
CLNC DEL			3	V/V(fpm)	335	670	1005	1340	1675	2010
134.675 271.6			21	V/V(fpm)	442	884	1326	1768	2210	2652
GND CON										

134.675 360.2


TOWER★

128.775 340.2

SOCAL DEP CON

127.3 323.0

Minimum Climb Rate to 1000

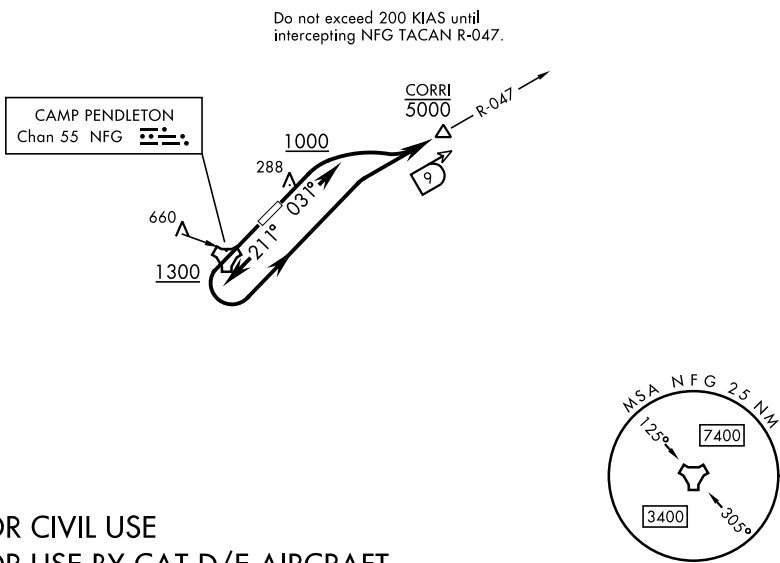

NOT FOR CIVIL USE

NOT FOR USE BY CAT D/E AIRCRAFT

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 3: Climb on heading 031° to 1000 then climbing right turn to 3800 and intercept NFG TACAN R-047 to CORRI.

TAKEOFF RWY 21: Climb on heading 211° to 1300 then climbing left turn to 3800 and intercept NFG TACAN R-047 to CORRI.

SW-3, 06 AUG 2026 to 03 SEP 2026

SW-3, 06 AUG 2026 to 03 SEP 2026