

(SADDE.TANDY6) 26246


TANDY SIX ARRIVAL

AL-236 (FAA)

LONG BEACH, CALIFORNIA

RADAR required.

SOCAL APP CON
127.4 263.025
KSJ ATIS
118.875 379.975
LGB ATIS
127.75
SNA D-ATIS
126.0
TOA ATIS
125.6

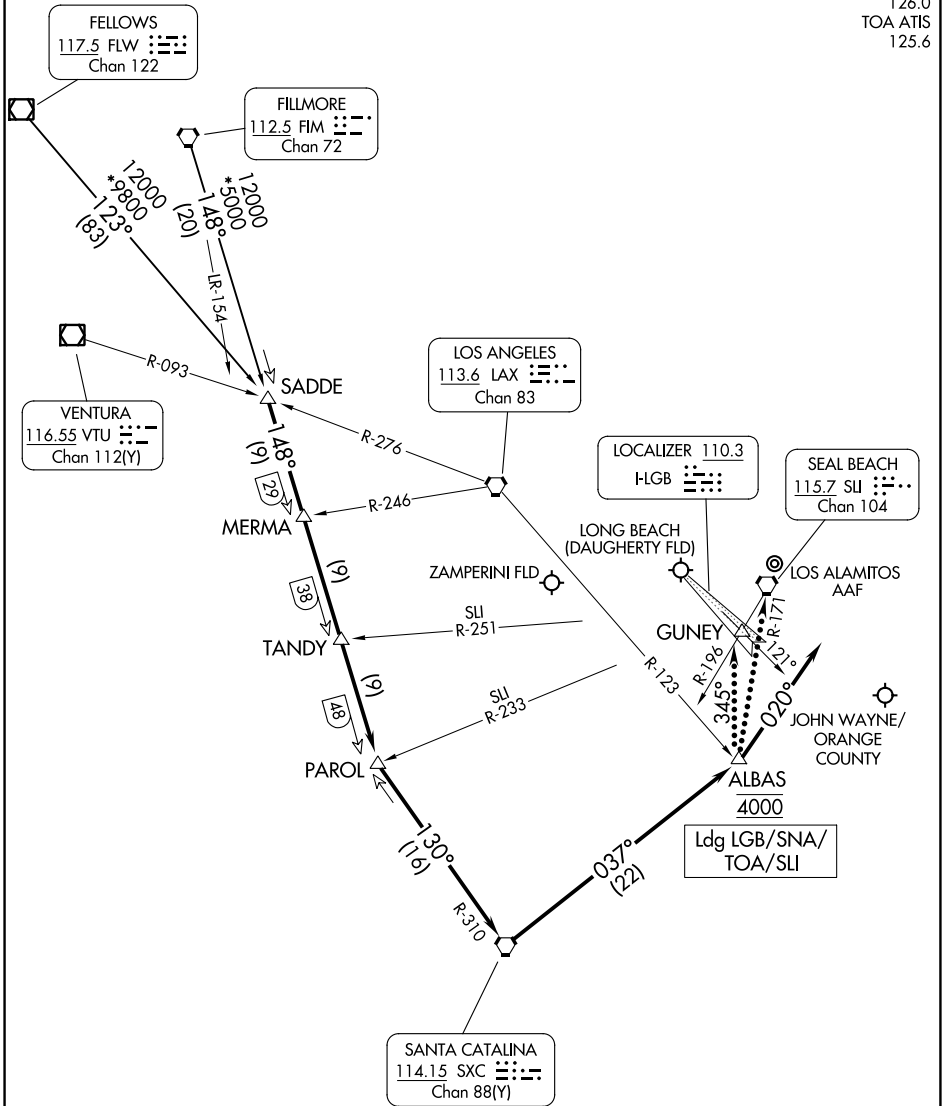

TANDY SIX ARRIVAL

(SADDE.TANDY6) 19MAR26

LONG BEACH, CALIFORNIA

SW-3, 03 SEP 2026 to 01 OCT 2026

SW-3, 03 SEP 2026 to 01 OCT 2026

ARRIVAL ROUTE DESCRIPTION

FELLOWS TRANSITION (FLW.TANDY6): From over FLW VOR/DME on FLW R-123 to SADDE. Thence. . . .

FILLMORE TRANSITION (FIM.TANDY6): From over FIM VORTAC on FIM R-148 to SADDE. Thence. . . .

LANDING ALL AIRPORTS: From over SADDE on FIM R-148 to PAROL. From over PAROL on SXC R-310 to SXC VORTAC. Then from over SXC VORTAC on SXC R-037 to cross ALBAS at 4000, then fly heading 020°. Expect RADAR vectors to final approach course.

LOST COMMUNICATIONS

LGB: From over ALBAS, maintain 4000 and turn left heading 345° to intercept the SLI R-196 to GUNEY INT, then proceed on ILS 30 approach or proceed on SLI R-171 to SLI VORTAC, then proceed on the VOR or TACAN RWY 30 approach.

TOA: Proceed on ILS RWY 29R approach.

SNA: After ALBAS, maintain 4000 and proceed on SLI R-171 to SLI VORTAC, then proceed on the ILS 20R approach.

SLI: After ALBAS, maintain 4000 and proceed on SLI R-171 to SLI VORTAC. Then proceed on the VOR or TACAN RWY 22L approach.

SW-3, 03 SEP 2026 to 01 OCT 2026

SW-3, 03 SEP 2026 to 01 OCT 2026