


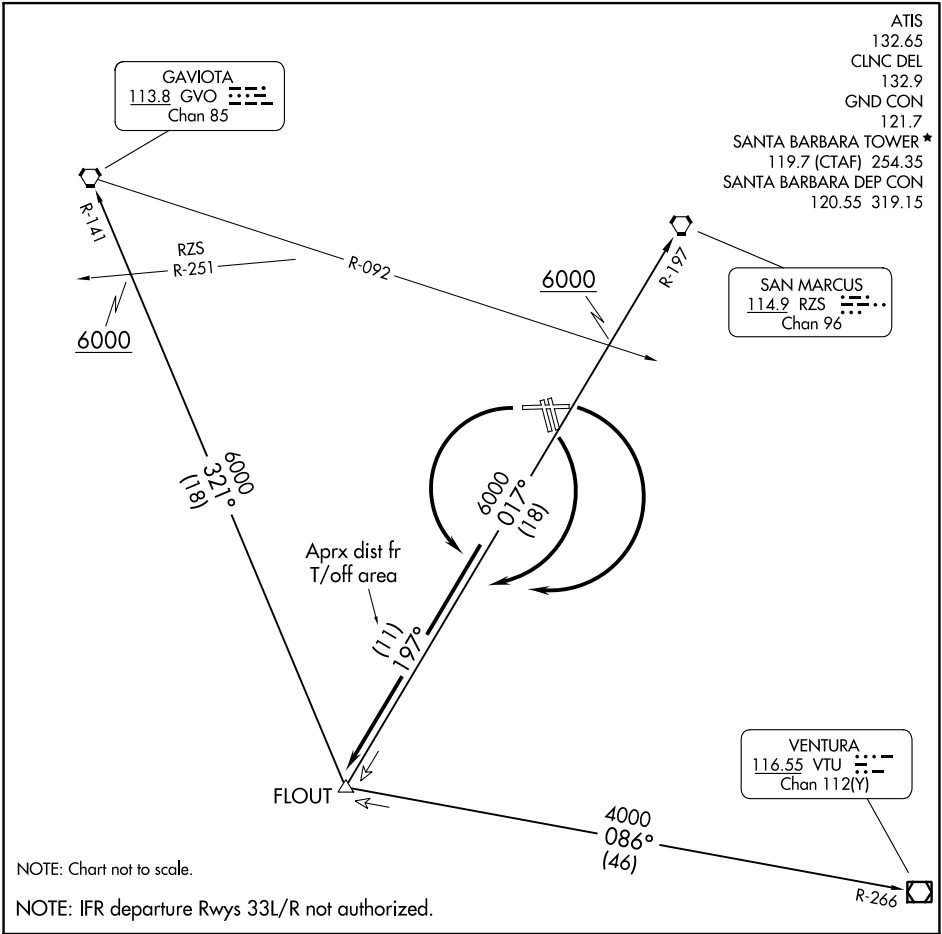

DEPARTURE ROUTE DESCRIPTION
TAKEOFF RUNWAYS 7 and 15L/R: Turn right, thence. . .
TAKEOFF RUNWAY 25: Turn left, thence. . .
. . . intercept and proceed via RZS R-197 to FLOUT INT. Thence via (transition or assigned route.)
GAVIOTA TRANSITION (FLOUT5.GVO): From over FLOUT INT via GVO R-141 to GVO VORTAC. Cross RZS R-251 at or above 6000'.
SAN MARCUS TRANSITION (FLOUT5.RZS): From over FLOUT INT via RZS R-197 to RZS VORTAC. Cross GVO R-092 at or above 6000'.
VENTURA TRANSITION (FLOUT5.VTU): From over FLOUT INT via VTU R-266 to VTU VOR/DME.