


ATIS ★125.55 363.05
TOWER ★
124.85 290.375
DEP CON ★
128.65 307.275

TACAN required

Rwy	Knots	60	120	180	240	300	360
★03 ⓐ	V/V(fpm)	205	410	615	820	1025	1230
†03 ⓑ	V/V(fpm)	215	430	645	860	1075	1290
†21 ⓑ	V/V(fpm)	232	464	696	928	1160	1392
†27 ⓑ	V/V(fpm)	212	424	636	848	1060	1272

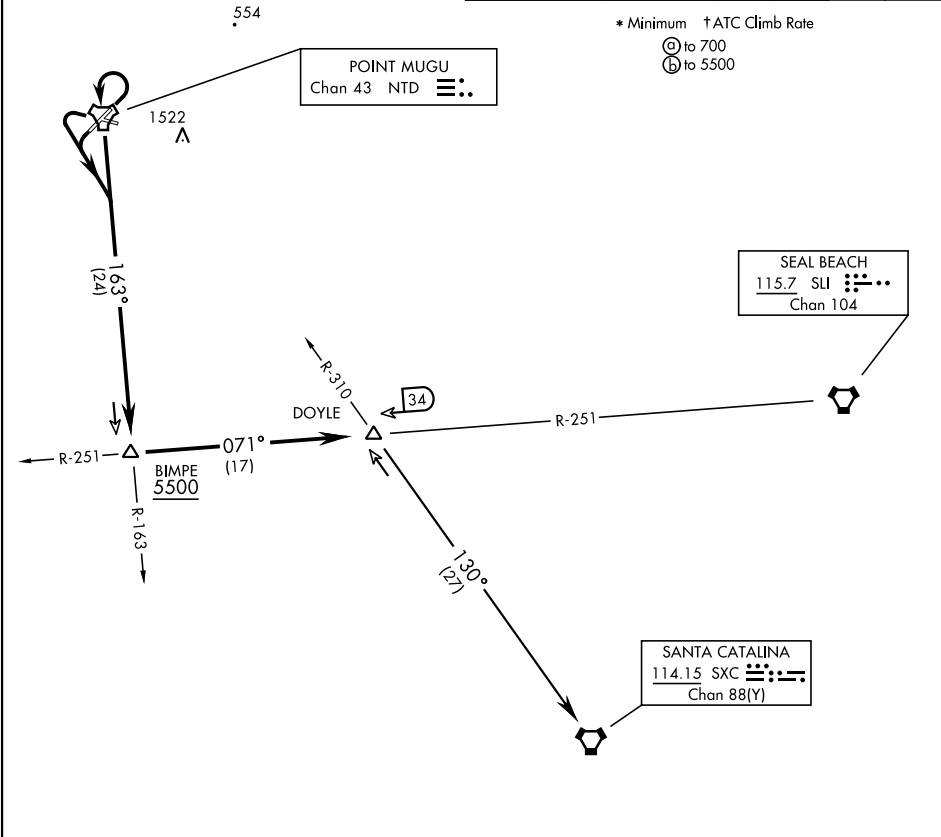

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 3: Climbing left turn within 3 DME of NTD TACAN, direct NTD, thence...

TAKEOFF RWY 21, 27: Left turn, thence...

...intercept NTD R-163 and via NTD R-163 to BIMPE (NTD R-163/24 DME), then via SLI VORTAC R-251 to DOYLE, then via assigned routing. Cross BIMPE at or above 5500.

SANTA CATALINA TRANSITION (DOYLE 9.SXC): DOYLE (SLI R-251/34 DME) to SANTA CATALINA VORTAC via SXC R-310. Then as filed.