


HI-ILS or LOC/DME RWY 30

LOC I-VBG 110.1	APCH CRS 305°	Rwy Idg 15,000 TDZE 368 Arpt Elev 368	[USSF]	VANDENBERG SFB (KVBG)
DME required				ALSF-2
* When ALS inop, increase CAT CDE RVR to 40 and vis to ¾ mile. ** When ALS inop, increase CAT CDE vis to 1½ miles.				MISSED APPROACH: Climb out VBG TACAN R-309 to WARRN and hold. Continue climb in hold maintain 4000.

ATIS 133.125 257.975	SANTA BARBARA APP/DEP CON ★ 124.15 327.8	TOWER ★ 124.95 (CTAF) 326.2	GND CON 121.75 275.8
--------------------------------	---	--	--------------------------------

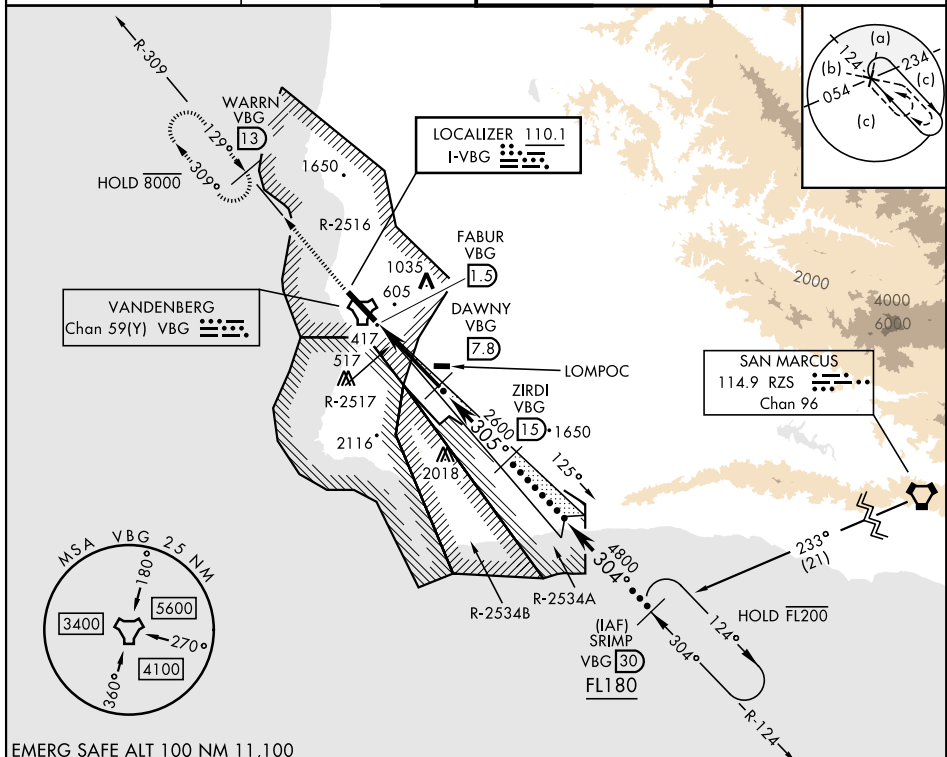

EMERG SAFE ALT 100 NM 11,100

4000 ↑ VBG R-309	WARRN VBG 13	VGSI and ILS Glideslope not coincident.		SRIMP VBG 30	ELEV 368	TDZE 368
CATEGORY					C D E	
S-ILS 30 *					568/24 200 (200-½)	
S-LOC 30 **					900/55 532 (600-1)	
CIRCLING					1020-1¾ 1180-2¾ 1560-3 652 (700-1¾) 812 (900-2¾) 1192 (1200-3)	

HI-ILS or LOC/DME RWY 30